



Quick Reference Card for the
VeriFone Omni



Stored Value Application on the PNS Network

ISSUANCE/ADD VALUE									
Idle Prompt	Press [GIFT CARD] hot key.								
Gift Card									
Issue Add Value [F2]	Press [F2] for issue add value.								
Redemption [F3]									
Balance Inquiry [F4]									
Password:	Key in appropriate password and press [ENTER].								
I= [Merchant 1]	<table border="0"> <tr> <td>Prev</td> <td>Press [F1] for previous merchant.</td> </tr> <tr> <td>Next</td> <td>Press [F2] for next merchant.</td> </tr> <tr> <td>Slet</td> <td>Press [F3] to select the displayed merchant.</td> </tr> <tr> <td>Exit</td> <td>Press [F4] to exit.</td> </tr> </table>	Prev	Press [F1] for previous merchant.	Next	Press [F2] for next merchant.	Slet	Press [F3] to select the displayed merchant.	Exit	Press [F4] to exit.
Prev	Press [F1] for previous merchant.								
Next	Press [F2] for next merchant.								
Slet	Press [F3] to select the displayed merchant.								
Exit	Press [F4] to exit.								
Merch Password:	Key in merchant password and press [ENTER].								
Number of cards:	1 Key in the number of cards to activate and press [ENTER].								
Swipe or Enter Account #:	Swipe card or enter card account number and press [ENTER].								
Exp Date (MMYY):	Key the card's expiration date in MMYY format and press [ENTER].								
Password:	Key in appropriate password and press [ENTER].								
[ACCT NUMBER] [EXP DATE]	Confirm account number and press [ENTER].								
Imprint Card Press Enter Key	Imprint the card and press [ENTER].								
Cust Ref #:	Key in customer reference # or press [ENTER] to bypass.								
Invoice Number:	Key in invoice number and press [ENTER].								
Table Number :	Key in server's table number and press [ENTER].								
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.								
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].								
Amount: \$ 0.00	Key in the dollar amount of the transaction and press [ENTER].								
Send Duplicate	<table border="0"> <tr> <td>Yes</td> <td>Select [F1] to send.</td> </tr> <tr> <td>No</td> <td>Select [F2] to cancel.</td> </tr> </table>	Yes	Select [F1] to send.	No	Select [F2] to cancel.				
Yes	Select [F1] to send.								
No	Select [F2] to cancel.								
Password:	Key in appropriate password and press [ENTER].								
Payment Type	<table border="0"> <tr> <td>Cash</td> <td>Press [F1] for Cash.</td> </tr> <tr> <td>Credit</td> <td>Press [F2] for Credit.</td> </tr> <tr> <td>Comp</td> <td>Press [F3] for Complimentary.</td> </tr> </table> Press [ENTER] after selection.	Cash	Press [F1] for Cash.	Credit	Press [F2] for Credit.	Comp	Press [F3] for Complimentary.		
Cash	Press [F1] for Cash.								
Credit	Press [F2] for Credit.								
Comp	Press [F3] for Complimentary.								
Print Cust Copy?	<table border="0"> <tr> <td>Yes</td> <td>Press [F1] for yes to print customer copy.</td> </tr> <tr> <td>No</td> <td>Press [F2] for no to return to the idle prompt.</td> </tr> </table>	Yes	Press [F1] for yes to print customer copy.	No	Press [F2] for no to return to the idle prompt.				
Yes	Press [F1] for yes to print customer copy.								
No	Press [F2] for no to return to the idle prompt.								
Tear Receipt Press Enter Key	Press [ENTER].								
Amt Due: \$ xx.xx	Press [ENTER] to initiate Sale transaction, or press [CANCEL] to return to the idle prompt.								

REDEMPTION									
Idle Prompt	Press [GIFT CARD] hot key.								
Issue Add value [F2]	Press [F3] for redemption								
Redemption [F3]									
Balance Inquiry [F4]									
Password:	Key in appropriate password and press [ENTER].								
I= [Merchant 1]	<table border="0"> <tr> <td>Prev</td> <td>Press [F1] for previous merchant.</td> </tr> <tr> <td>Next</td> <td>Press [F2] for next merchant.</td> </tr> <tr> <td>Slet</td> <td>Press [F3] to select the displayed merchant.</td> </tr> <tr> <td>Exit</td> <td>Press [F4] to exit.</td> </tr> </table>	Prev	Press [F1] for previous merchant.	Next	Press [F2] for next merchant.	Slet	Press [F3] to select the displayed merchant.	Exit	Press [F4] to exit.
Prev	Press [F1] for previous merchant.								
Next	Press [F2] for next merchant.								
Slet	Press [F3] to select the displayed merchant.								
Exit	Press [F4] to exit.								
Merch Password:	Key in merchant password and press [ENTER].								
Swipe or Enter Account #:	Swipe card or key in card number and press [ENTER].								
Exp Date (MMYY):	Key in expiration date in MMYY format and press [ENTER].								
Password:	Key in appropriate password and press [ENTER].								
[ACCT NUMBER] [EXP DATE]	Confirm account number and press [ENTER].								
Imprint Card Press Enter Key	Imprint the card and press [ENTER].								
Cust Ref #:	Key in customer reference # or press [ENTER] to bypass.								
Invoice Number :	Key in invoice number and press [ENTER].								
Table Number:	Key in server's table number and press [ENTER].								
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.								
Clerk/Server ID :	Key in the clerk/server ID and press [ENTER].								
Amount : \$ 0.00	Key in the dollar amount of the transaction and press [ENTER].								
Tip: \$ 0.00	Key in the tip amount of the transaction and press [ENTER].								
Send Duplicate	<table border="0"> <tr> <td>Yes</td> <td>Select [F1] to send.</td> </tr> <tr> <td>No</td> <td>Select [F2] to cancel.</td> </tr> </table>	Yes	Select [F1] to send.	No	Select [F2] to cancel.				
Yes	Select [F1] to send.								
No	Select [F2] to cancel.								
Password:	Key in appropriate password and press [ENTER].								
Print Cust Copy	<table border="0"> <tr> <td>Yes</td> <td>Press [F1] to print customer copy.</td> </tr> <tr> <td>No</td> <td>Press [F2] to return to the Idle prompt.</td> </tr> </table>	Yes	Press [F1] to print customer copy.	No	Press [F2] to return to the Idle prompt.				
Yes	Press [F1] to print customer copy.								
No	Press [F2] to return to the Idle prompt.								
Tear Receipt Press Enter Key	Press [ENTER].								
Amt Due: \$ xx.xx	Press [ENTER] to initiate Sale transaction. Enter to confirm Press [CANCEL] to return to the idle prompt.								

MULTI-ISSUANCE/ADD VALUE									
Idle Prompt	Press [GIFT CARD] hot key.								
Gift Card									
Issue Add Value [F2]	Press [F2] for issue add value.								
Redemption [F3]									
Balance Inquiry [F4]									
Password:	Key in appropriate password and press [ENTER].								
I= [Merchant 1]	<table border="0"> <tr> <td>Prev</td> <td>Press [F1] for previous merchant.</td> </tr> <tr> <td>Next</td> <td>Press [F2] for next merchant.</td> </tr> <tr> <td>Slet</td> <td>Press [F3] to select the displayed merchant.</td> </tr> <tr> <td>Exit</td> <td>Press [F4] to exit.</td> </tr> </table>	Prev	Press [F1] for previous merchant.	Next	Press [F2] for next merchant.	Slet	Press [F3] to select the displayed merchant.	Exit	Press [F4] to exit.
Prev	Press [F1] for previous merchant.								
Next	Press [F2] for next merchant.								
Slet	Press [F3] to select the displayed merchant.								
Exit	Press [F4] to exit.								
Merch Password:	Key in merchant password and press [ENTER].								
Number of cards:	1 Key in the number of cards to activate and press [ENTER].								
Swipe or Enter Account #:	Swipe card or enter card account number and press [ENTER].								
Exp Date (MMYY):	Key the card's expiration date in MMYY format and press [ENTER].								
Password:	Key in appropriate password and press [ENTER].								
[ACCT NUMBER] [EXP DATE]	Confirm account number and press [ENTER].								
Imprint Card Press Enter Key	Imprint the card and press [ENTER].								
Cust Ref #:	Key in customer reference # or press [ENTER] to bypass.								
Invoice Number:	Key in invoice number and press [ENTER].								
Table Number:	Key in server's table number and press [ENTER].								
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.								
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].								
Amount: \$ 0.00	Key in the dollar amount of the transaction and press [ENTER].								
Send Duplicate	<table border="0"> <tr> <td>Yes</td> <td>Select [F1] to send.</td> </tr> <tr> <td>No</td> <td>Select [F2] to cancel.</td> </tr> </table>	Yes	Select [F1] to send.	No	Select [F2] to cancel.				
Yes	Select [F1] to send.								
No	Select [F2] to cancel.								
Password:	Key in appropriate password and press [ENTER].								
Payment Type	<table border="0"> <tr> <td>Cash</td> <td>Press [F1] for Cash.</td> </tr> <tr> <td>Credit</td> <td>Press [F2] for Credit.</td> </tr> <tr> <td>Comp</td> <td>Press [F3] for Complimentary.</td> </tr> </table> Press [ENTER] after selection.	Cash	Press [F1] for Cash.	Credit	Press [F2] for Credit.	Comp	Press [F3] for Complimentary.		
Cash	Press [F1] for Cash.								
Credit	Press [F2] for Credit.								
Comp	Press [F3] for Complimentary.								

MULTI-ISSUANCE/ADD VALUE CONTINUED...					
Swipe or Enter Account #:	Swipe card or enter card account number and press [ENTER].				
Exp Date (MMYY):	Key in expiration date in MMYY format and press [ENTER].				
Password:	Key appropriate password and press [ENTER].				
[ACCT NUMBER] [EXP DATE]	Confirm account number and expiration date and press [ENTER].				
Imprint Card Press Enter Key	Imprint the card and press [ENTER].				
Invoice Number:	Key in invoice number and press [Enter].				
Print Cust Copy?	<table border="0"> <tr> <td>Yes</td> <td>Press [F1] for yes to print customer copy.</td> </tr> <tr> <td>No</td> <td>Press [F2] for no to return to the idle prompt.</td> </tr> </table>	Yes	Press [F1] for yes to print customer copy.	No	Press [F2] for no to return to the idle prompt.
Yes	Press [F1] for yes to print customer copy.				
No	Press [F2] for no to return to the idle prompt.				
Tear Receipt Press Enter Key	Press [ENTER].				
Amt Due: \$ xx.xx	Press [ENTER] to confirm transaction. Enter to confirm Press [CANCEL] to return to the idle prompt.				

FORCE ISSUANCE	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value Redemption Balance Inquiry	Press [ARROW] key to scroll menu.
Add Tip [F1] Reports [F2] Force Issuance [F3] Force Redempt [F4]	Press [F3] to select Force Issuance.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd	Key in merchant password and press [ENTER].
Swipe or Enter Account #:	Swipe or enter card account number and press [ENTER].
Exp Date (MMYY):	Key in card's expiration date in MMY format and press [ENTER].
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Confirm account number and press [ENTER].
Imprint Card Press Enter Key	Imprint the card and press [ENTER].
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table Number:	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the dollar amount of the transaction and press [ENTER].
Send Duplicate?	Yes Press [F1] to send. No Press [F2] to cancel.
Password	Key in appropriate password and press [ENTER].
Payment Type	Cash Press [F1] for Cash. Credit Press [F2] for Credit. Comp Press [F3] for Complimentary.
Appr Code:	Key in approval code and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

FORCE REDEMPTION	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F1] Redemption [F2] Balance Inquiry [F3]	Press [ARROW] key to select option.
Add Tip [F1] Reports [F2] Force Issuance [F3] Force Redempt [F4]	Press [F4] to select Force Redemption.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Password:	Key in merchant password and press [ENTER].
Swipe or Enter Account #:	Swipe card or key in card account number and press [ENTER].
Exp Date (MMYY):	Key in expiration date in MMY format and press [ENTER].
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Confirm account number and expiration date and press [ENTER].
Imprint Card Press Enter Key	Imprint the card and press [ENTER].
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table Number:	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/Server ID :	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the dollar amount and press [ENTER].
Tip: \$ 0.00	Key in the tip amount and press [ENTER].
Send Duplicate?	Yes Press [F1] to send. No Press [F2] to cancel.
Password:	Key in appropriate password and press [ENTER].
Appr Code:	Key in approval code and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

ACTIVATION	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F1] Redemption [F2] Balance Inquiry [F3]	Press the [ARROW] key twice.
Activation [F1] Block Activate [F2] Deactivation [F3] Reactivation [F4]	Press [F1] to select Activation.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd:	Key in the merchant password and press [ENTER].
Number of Cards: 1	Key in the number of cards to activate and press [ENTER].
Swipe or Enter Account #:	Swipe or key in card number and press [ENTER].
Exp Date (MMYY):	Key in expiration date in MMY format and press [ENTER] for each card activated.
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Press [ENTER] if the account number displayed is correct for each card.
Imprint Card Press Enter Key	Imprint each card and press [ENTER]. Repeat as necessary with each card.
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table # :	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/ Server ID	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the dollar amount and press [ENTER].
Send Duplicate	Yes Select Yes and press [ENTER] to process transaction. No Select No to cancel.
Password:	Key in appropriate password and press [ENTER].
Payment Type	Cash Select payment type and press [ENTER]. Credit Comp
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER] to print a second copy of the receipt.
Amt Due: \$ xx.xx Enter to confirm	Press [ENTER] to initiate Sale transaction. Press [CANCEL] to return to the idle prompt.

BLOCK ACTIVATION	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F1] Redemption [F2] Balance Inquiry [F3]	Press the [ARROW] key twice.
Activation [F1] Block Activate [F2] Deactivation [F3] Reactivation [F4]	Press [F2] to select Block Activation.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd:	Key in the merchant password and press [ENTER].
Number of Cards: 1	Key in the number of cards to activate and press [ENTER].
Swipe or Enter Account #:	Swipe or key in card number and press [ENTER].
Exp Date (MMYY):	Key in expiration date in MMY format and press [ENTER] for each card activated.
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Press [ENTER] if the account number displayed is correct for each card.
Imprint Card Press Enter Key	Imprint each card and press [ENTER]. Repeat as necessary with each card.
Swipe or Enter Last Account # :	Swipe card or enter card account number of the last card in the block and press [ENTER].
Exp Date (MMYY)	Key in expiration date in MMY format and press [ENTER] for each card activated.
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Press [ENTER] if the account number displayed is correct for each card.
Imprint Card Press Enter Key	Imprint each card and press [ENTER]. Repeat as necessary with each card.
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table # :	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/ Server ID	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the dollar amount and press [ENTER].
Send Duplicate	Yes Select Yes and press [ENTER] to process transaction. No Select No to cancel.
Password:	Key in appropriate password and press [ENTER].
Payment Type	Cash Select payment type and press [ENTER]. Credit Comp
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER] to print a second copy of the receipt.
Amt Due: \$ xx.xx Enter to confirm	Press [ENTER] to initiate Sale transaction. Press [CANCEL] to return to the idle prompt.

Shaded sections are optional features.

Shaded sections are optional features.

DEACTIVATION	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F1] Redemption [F2] Balance Inquiry [F3]	Press the purple [ARROW] key twice for options.
Activation [F1] Block Activate [F2] Deactivation [F3] Reactivation [F4]	Press [F3] to select deactivation.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd:	Key in the merchant password and press [ENTER].
Swipe or Enter Account #:	Swipe or key in card number and press [ENTER].
Exp Date (MMYY)	Key in card's expiration in MMY format and press [ENTER].
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Confirm account number, expiration date and press [ENTER].
Imprint Card Press Enter Key	Imprint the card and press [ENTER].
Confirm	Yes Select Yes to deactivate the card No Select No to return to the menu.
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table Number:	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

REACTIVATION	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F1] Redemption [F2] Balance Inquiry [F3]	Press the purple [ARROW] key twice for options.
Activation [F1] Block Activate [F2] Deactivation [F3] Reactivation [F4]	Press [F4] to select reactivation.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd:	Key in the merchant password and press [ENTER].
Swipe or Enter Account #:	Swipe or key in card number and press [ENTER].
Exp Date (MMYY)	Key in card's expiration in MMY format and press [ENTER].
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Confirm account number, expiration date and press [ENTER].
Imprint Card Press Enter Key	Imprint the card and press [ENTER].
Cust Ref #:	Key in the customer reference # or press [ENTER] to bypass.
Invoice Number:	Key in invoice number and press [ENTER].
Table Number:	Key in server's table number and press [ENTER].
Tran Ref:	Key in the transaction reference number or press [ENTER] to bypass.
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the dollar amount and press [ENTER].
Send Duplicate	Yes Select Yes and press [ENTER] to process transaction. No Select No to cancel transaction.
Password:	Key in appropriate password and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

BALANCE INQUIRY	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F2] Redemption [F3] Balance Inquiry [F4]	Press [F4] for balance inquiry
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Password:	Key in merchant password and press [ENTER].
Swipe or Enter Account #:	Swipe or enter in card number and press [ENTER].
Exp Date (MMYY):	Key in card's expiration date in MMY format and press [ENTER].
Password:	Key in appropriate password and press [ENTER].
[ACCT NUMBER] [EXP DATE]	Press [ENTER] to confirm account number and expiration.
Clerk/Server ID :	Key in the clerk/server ID and press [ENTER].
Invoice Number:	Key in invoice number and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] Yes to print customer copy. No Press [F2] No to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

VOID	
Idle Prompt	Press [F4] to select void
Password:	Key in the appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Passwd:	Key in the merchant password and press [ENTER].
Void Last Trans?	Yes Press [F1] to void the last transaction entered. No Press [F2] to cancel and return to idle prompt.
Retrieve By:	Inv# Select [F1] to search by invoice number. Acct# Select [F2] to search by the account number.
Invoice Number:	Key in the invoice number and press [ENTER].
Last 4 digits	Key in the last four digits of the credit card number and press [ENTER].
[CARD TYPE] [Tran Type] [Account Number] \$ XX.XX	Yes Select Next to display the following transaction. No Select [F1] yes to void. Next Select [F2] no to cancel and return to idle prompt.
Prnt Cust Copy?	Yes Press [F1] to print a copy of the receipt. No Press [F2] to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

ADD TIP	
Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F2] Redemption [F3] Balance Inquiry [F4]	Press [ARROW].
Add Tip [F1] Reports [F2] Force Issuance [F3] Force Redempt [F4]	Press [F1] to add tip.
Password:	Key in appropriate password and press [ENTER].
I= [Merchant 1]	Prev Press [F1] for previous merchant. Next Press [F2] for next merchant. Slet Press [F3] to select the displayed merchant. Exit Press [F4] to exit.
Merch Password:	Key in merchant password and press [ENTER].
Invoice Number:	Key in invoice number and press [ENTER].
[Tran Type] [Account Number] \$ XX.XX	Yes Press [F1] to select the transaction. No Press [F2] to cancel and return to the menu.
Clerk/Server ID:	Key in the clerk/server ID and press [ENTER].
Amount: \$ 0.00	Key in the amount of the tip and press [ENTER].
Invoice Number:	Key in invoice number and press [ENTER].
Prnt Cust Copy?	Yes Press [F1] to print customer copy. No Press [F2] to return to the idle prompt.
Tear Receipt Press Enter Key	Press [ENTER].

REPRINT

Idle Prompt	Press [ARROW] once.
Refund [F1] Force [F2] Reprint [F3] Check [F4]	Press [F3] for reprint.
Password:	Key in the appropriate password and press [ENTER].
Reprint	
Last Receipt [F2] Any Receipt [F3]	Press [F2] to print last receipt. Press [F3] to print other receipt.
Invoice Number:	Key in the invoice number and press [ENTER].
Reprint Receipt	Receipt prints.

REPORTS

Idle Prompt	Press [GIFT CARD] hot key.
Issue Add Value [F2] Redemption [F3] Balance Inquiry [F4]	Press [ARROW].
Add Tip [F1] Reports [F2] Force Issuance [F3] Force Redempt [F4]	Press [F2] for reporting options.
Detail Report [F2] Totals Report [F3] Svr/Clk Reports [F4]	Select [F2] for detail report. Select [F3] for totals report. Select [F4] for server/clerk reports.
Detail Report [F2] Totals Report [F3]	Select [F2] for detailed clerk report. Select [F3] for totals clerk report.
Password:	Key in appropriate password and press [ENTER].
Clerk/Srvr Rpt Options	One Select [F1] for one clerk. All Select [F2] for all clerks.
Clerk/Server Id:	Key in the clerk/server ID and press [ENTER].
[Report Name]	Report prints.

SETTLEMENT

Idle Prompt	Press [F3] for settlement.
Password:	Key in the appropriate password and press [ENTER].
Sales: \$ XX.XX Refunds: \$ XX.XX	Confirm totals, press [ENTER].
Total: \$ XX.XX Enter to confirm	
Sales: \$ XX.XX	Key in the sales total and press [ENTER].
Refunds: \$ XX.XX	Key in the refund total and press [ENTER].
Total: \$ XX.XX	Key in the batch total and press [ENTER].
Waiting for answer Please wait...	(No action while processing)
Settlement Successful	Settlement report prints and terminal returns to idle prompt.

